




LANCOM L-1310acn dual Wireless

Quick Reference Guide




Please observe the following when setting up the device

- Recommended wall mounting: Align the front panel downwards
- Lockable wall mounting with the LANCOM Wall Mount (available as an accessory)





- In case of wall mounting, use the drilling template as supplied




- For devices to be operated on the desktop, please attach the adhesive rubber footpads
- Do not rest any objects on top of the device



- Keep the ventilation slots of the device clear of obstruction

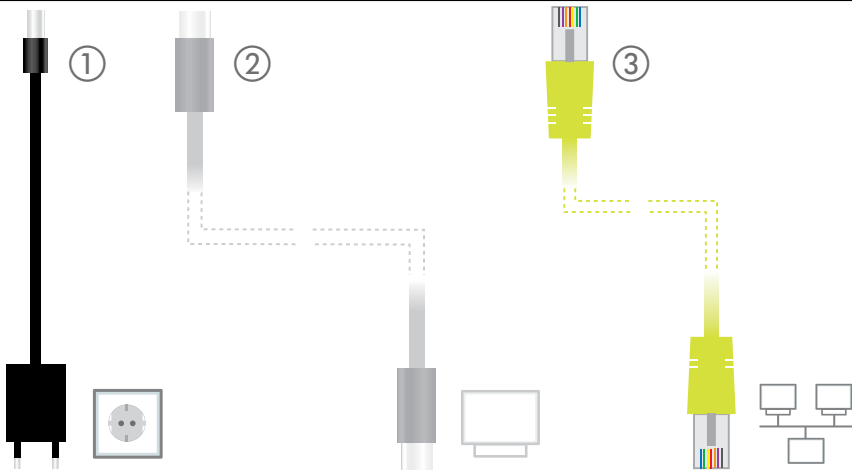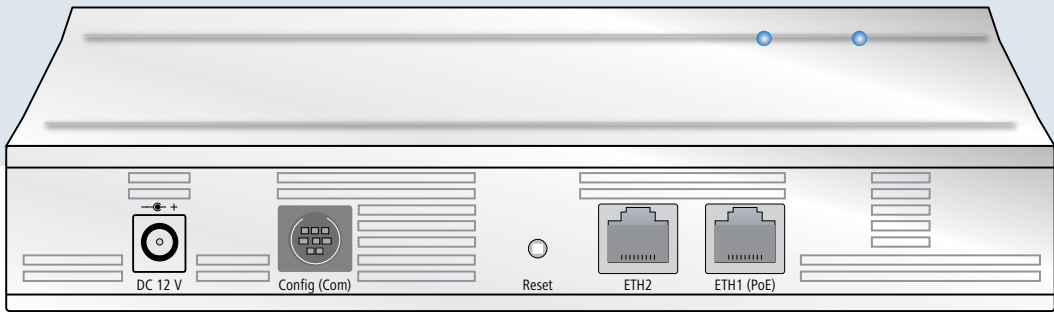

① Power
When connecting the cable to the device, turn the bayonet connector 90° clockwise until it clicks into place.




Use only the supplied power adapter.

② Optional: Serial configuration cable
You can connect the device to a PC with a configuration cable (available separately).

③ LAN
Use the cable with the kiwi-colored connectors to connect interface ETH1 or ETH2 to your PC or a LAN switch.



The best signal coverage is achieved if the unit is wallmounted and the top of the unit is aligned towards the area that requires coverage.

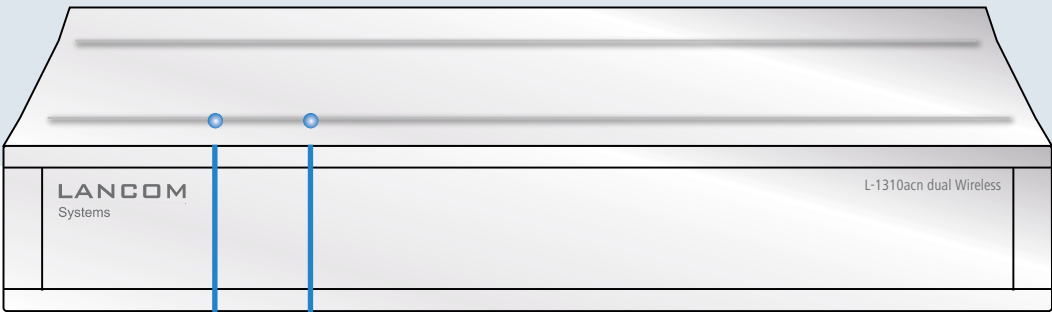

① Power

① Power	
Off	Device switched off
Green on, permanently	Device operational
Blinking green	Configuration password not set. Without a configuration password, the configuration data in the device is unprotected.
Blinking alternately orange/green with the WLAN link LED	At least one WLAN module is in managed mode and has not found a WLAN Controller yet. The corresponding WLAN module(s) is/are switched off until a WLAN Controller is found to supply a configuration, or until being switched manually into another operating mode.
Blinking alternately orange/red with the WLAN link LED	At least one WLAN module is in managed mode and has found a WLAN Controller. However, the WLAN Controller cannot assign a configuration because the firmware and/or the device's loader version is not compatible with the WLAN Controller.

② WLAN Link

② WLAN Link	
Off	No WLAN network defined or WLAN module deactivated. The WLAN module is not transmitting beacons.
Green	At least one WLAN network is defined and WLAN module activated. The WLAN module is transmitting beacons.
Green inverse flashing	Number of flashes = number of connected WLAN stations and P2P wireless connections, followed by a pause (default). Alternatively the frequency of the flashing can indicate signal strength over the defined P2P link or the signal strength between the access point and the device operating in client mode.
Blinking green	DFS scanning or other scan procedure

License information for the device firmware (LCOS) is available in the file LCOS-Licenses.txt on the data medium supplied.

Hardware	
Power supply	12 V DC, external power adapter (110 or 230 V) with bayonet connector to secure against disconnection
Power consumption	Approx. 18.9 W via 12V/1.5 A power adapter (value refers to the overall power for the access point and power adapter), about 16 W via PoE (value refers to the power for the access point only)
Environment	Temperature range 0–40 °C when mounted vertically on a LANCOM wall mount. Temperature range 0–35 °C when mounted horizontally. WLAN radio modules switch off automatically to avoid overheating of the access point.
Mounting	Recommended mounting via LANCOM Wall Mount with the device's front facing downwards
Housing	Robust synthetic housing, rear connectors, ready for wall mounting, Kensington lock; measures 210 × 45 × 140 mm (W × H × D)
Number of fans	None; fanless design, no rotating parts, high MTBF

WLAN

Frequency band	2400–2483.5 MHz (ISM) or 5150–5825 MHz (restrictions vary between countries)
Radio channels 2.4 GHz	Up to 13 channels, max. 3 non-overlapping (2.4 GHz band)
Radio channels 5 GHz	Up to 26 non-overlapping channels (channels available vary according to country regulations; DFS for automatic dynamic channel selection required)

Interfaces

ETH1 (PoE)	10/100/1000 Base-TX, autosensing, auto node hub, PoE compliant with IEEE 802.3af and IEEE 802.3at. It is recommended to use a PoE adapter or switch with IEEE 802.3at support. Using PoE with IEEE 802.3af the number of spatial streams is limited.
ETH2	10/100/1000 Base-TX, autosensing, auto node hub
DSL over LAN (DSLol)	A LAN port can (even parallel to LAN mode) be used as a WAN port for connecting external DSL modems (PPPoE) or external routers
Serial interface	Serial configuration interface / COM port (8-pin Mini-DIN): 9,600–115,000 baud

Declaration of conformity

For the declaration of conformity, see the product page on our website www.lancom-systems.eu

Package content

Manual	Quick Reference Guide (DE/EN) and Quick Installation Guide (DE/EN/FR/ES/IT/PT/NL)
CD/DVD	CD/DVD with firmware, management software (LANconfig, LANmonitor, LANCAPI) and documentation
Cable	Ethernet cable, 3m (LAN: kiwi-colored connectors; WAN: green connectors)
Power adapter	External power adapter, NEST 12 V/1.5 A DC/S, barrel connector 2.1/5.5 mm bayonet, LANCOM item no. 110723 (EU, 230 V), LANCOM item no. 110829 (UK, 230 V), LANCOM item no. 111007 (US, 110 V)

LANCOM, LANCOM Systems and LCOS are registered trademarks. All other names or descriptions used may be trademarks or registered trademarks of their owners. Subject to change without notice. No liability for technical errors and/or omissions. 1111850814